

# OP - ROTAZIONE E ANGOLI DI TRASFERIMENTO

## Rotation and cam transfer angles

Angolo rotazione <i>Angular displacement</i>	Fasi del ciclo <i>Cycle phases</i>			
	Rotazione <i>Rotation</i>	Pausa <i>Dwell</i>	Rotazione <i>Rotation</i>	Pausa <i>Dwell</i>
	<b>A</b>	<b>B</b>	<b>C</b>	<b>D</b>

<b>15</b>	30	150	30	150
	30	300	30	0
	45	135	45	135
	45	270	45	0
	60	120	60	120
	60	240	60	0
	90	90	90	90
	90	180	90	0
	120	60	120	60
	120	120	120	0
	150	30	150	30
	150	60	150	0
	180	0	180	0

<b>20</b>	45	135	45	135
	45	270	45	0
	60	120	60	120
	60	240	60	0
	90	90	90	90
	90	180	90	0
	120	60	120	60
	120	120	120	0
	150	30	150	30
	150	60	150	0
	180	0	180	0

# OP - ROTAZIONE E ANGOLI DI TRASFERIMENTO

## Rotation and cam transfer angles

Angolo rotazione <i>Angular displacement</i>	Fasi del ciclo <i>Cycle phases</i>			
	Rotazione <i>Rotation</i>	Pausa <i>Dwell</i>	Rotazione <i>Rotation</i>	Pausa <i>Dwell</i>
	<b>A</b>	<b>B</b>	<b>C</b>	<b>D</b>

<b>30</b>	45	135	45	135
	45	270	45	0
	60	120	60	120
	60	240	60	0
	90	90	90	90
	90	180	90	0
	120	60	120	60
	120	120	120	0
	150	30	150	30
	150	60	150	0
	180	0	180	0

<b>45</b>	60	120	60	120
	60	240	60	0
	90	90	90	90
	90	180	90	0
	120	60	120	60
	120	120	120	0
	150	30	150	30
	150	60	150	0
	180	0	180	0